


## INSTALLATION INSTRUCTIONS : GOLD & DIAMOND RANGE WALL CLADDING


- 1 CLEAR THE AREA.** ENSURE YOU HAVE A SOLID STRUCTURE TO WORK UP AGAINST WHERE YOUR FRAMEWORK WILL BE SECURELY FIXED TO.

AREA TO BE  
CLADDDED.

- 2 PLANK SUPPORT JOISTS.** IT IS ESSENTIAL WHEN FITTING CLADDING PLANKS THAT A FIXING JOIST IS MOUNTED AT THE BEGINNING OF THE AREA AS WELL AS AT THE END OF THE AREA. IT IS NECESSARY FOR THE JOISTS TO BE FIXED SECURELY AT THE ENDS AS THIS IS WHERE MOST OF THE PROBLEMS OCCUR, IF THIS IS NOT DONE CORRECTLY.

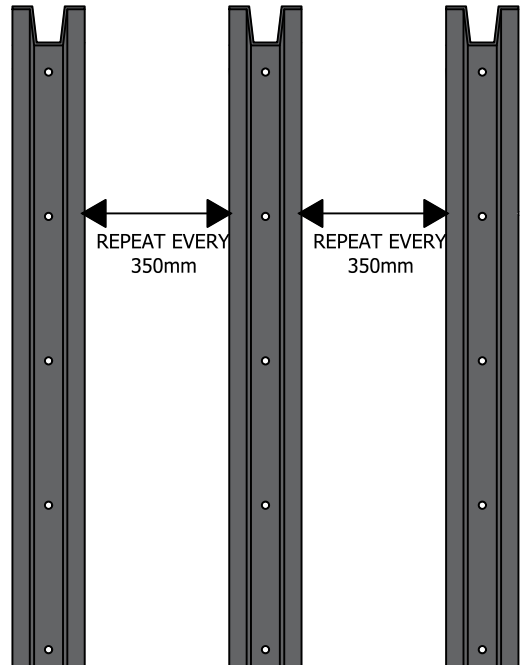

- 3 FIXING THE C-CHANNELS TO THE STRUCTURE.** FASTEN THE 64x32x2mm TOP HAT PROFILE TO YOUR WALL USING FISCHER HAMMER FIXINGS. THE FISCHER FIXINGS SHOULD BE FASTENED AT EVERY 400mm THROUGH THE TOP HAT PROFILE, WITH THE TOP HAT PROFILE SPACED AT 350mm APART OR LESS. IT IS IMPORTANT TO ENSURE THAT ALL JOISTS ARE ALL PERFECTLY FLAT, STRAIGHT AND LEVEL.

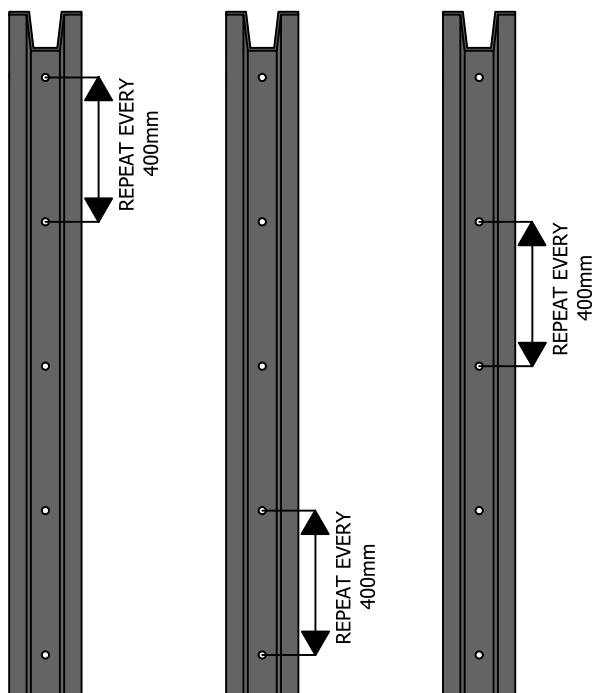

- 4 FIXING THE CLADDING PLANKS.** ONE COULD CHOOSE TO START AT THE TOP OR BOTTOM, ENSURING YOUR PLANK ARE THE CORRECT WAY AROUND FOR WATER TO RUN OFF AND NOT RUN IN BETWEEN THE PLANKS. **NB WHEN FITTING PLANKS, IT IS NECESSARY TO CREATE A MORE OVAL TYPE HOLE IN THE PLANK WHICH IS DONE SO THERE IS SOME TOLERANCE FOR THE PLANK TO MOVE UNDER NORMAL CONDITIONS.** USING BEST DECK PAN HEAD SCREWS, SIMPLY INSERT THE SCREW INTO THE RECESS OF THE CLADDING PLANK. THROUGH THE OVAL HOLE THAT HAS BEEN DRILLED USING THE BEST DECK PAN HEAD SCREW SUPPLIED, INSERT THROUGH HOLE AND FIX TO YOUR STRUCTURE.

